

*NBE Maintenance



* Customers can put some grease on pivot points (red circle place), with brass or gunmetal bushings.




* Let's maintain your machine!

NBE.5 HARDWARE
(shown in actual size)


A[1PCS]



B[1PCS]

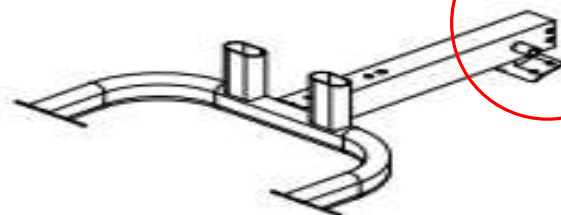

C[1PCS]

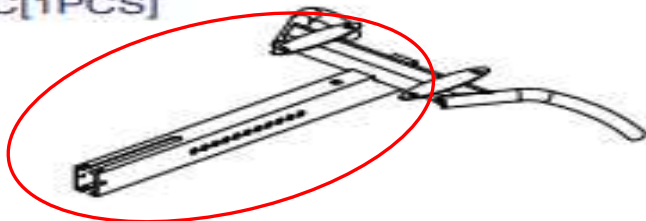

D[1PCS]



E[1PCS]

8370-056



F[1PCS]

8323-173



G[1PCS]

8312-067



M[2PCS]

9131-049



N[1PCS]


8830-037

pre-installed




NBE.5 HARDWARE (shown in actual size)


D2.Ø31.8" Round End Cap (9211-169)	2PCS
D3.40X80 End Cap (9211-191)	2PCS
D4.□50X75 End Cap (9211-012)	1PCS
D5.94X164L Rubber Pad (9310-076)	2PCS
D6.□75X82.5 Rubber Bushing (9211-178) pre-installed	1PCS
D7.Impregnated with handle (9162-149) pre-installed	2PCS
D8.Chrome Collar (8890-048) pre-installed	2PCS
D9.Rubber dount (9214-045)	2PCS
D10.The iron sleeve (8110-135) pre-installed	2PCS
D11.POP PIN (8250-065G) pre-installed	1PCS
D12. D10.The iron sleeve (8110-134) pre-installed	2PCS
D13. Round End Cap (9211-177) pre-installed	6PCS

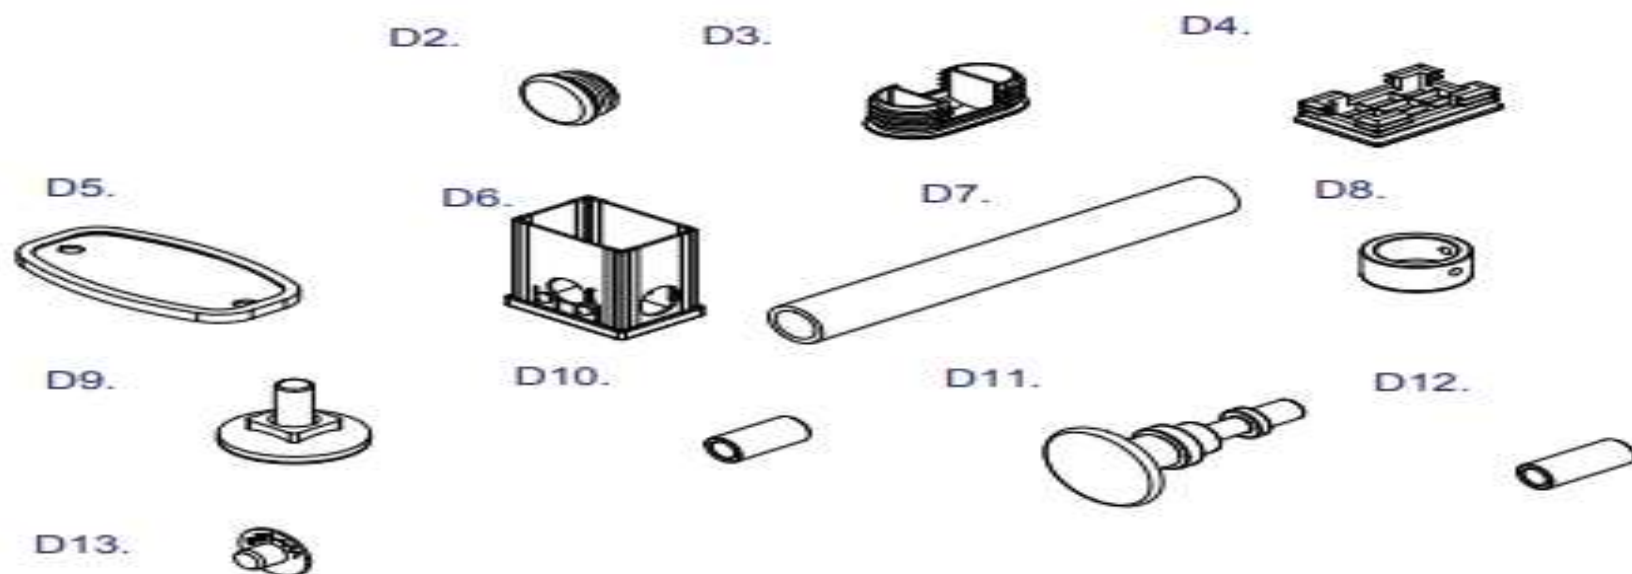


Above shows STEP 1
assembled and completed

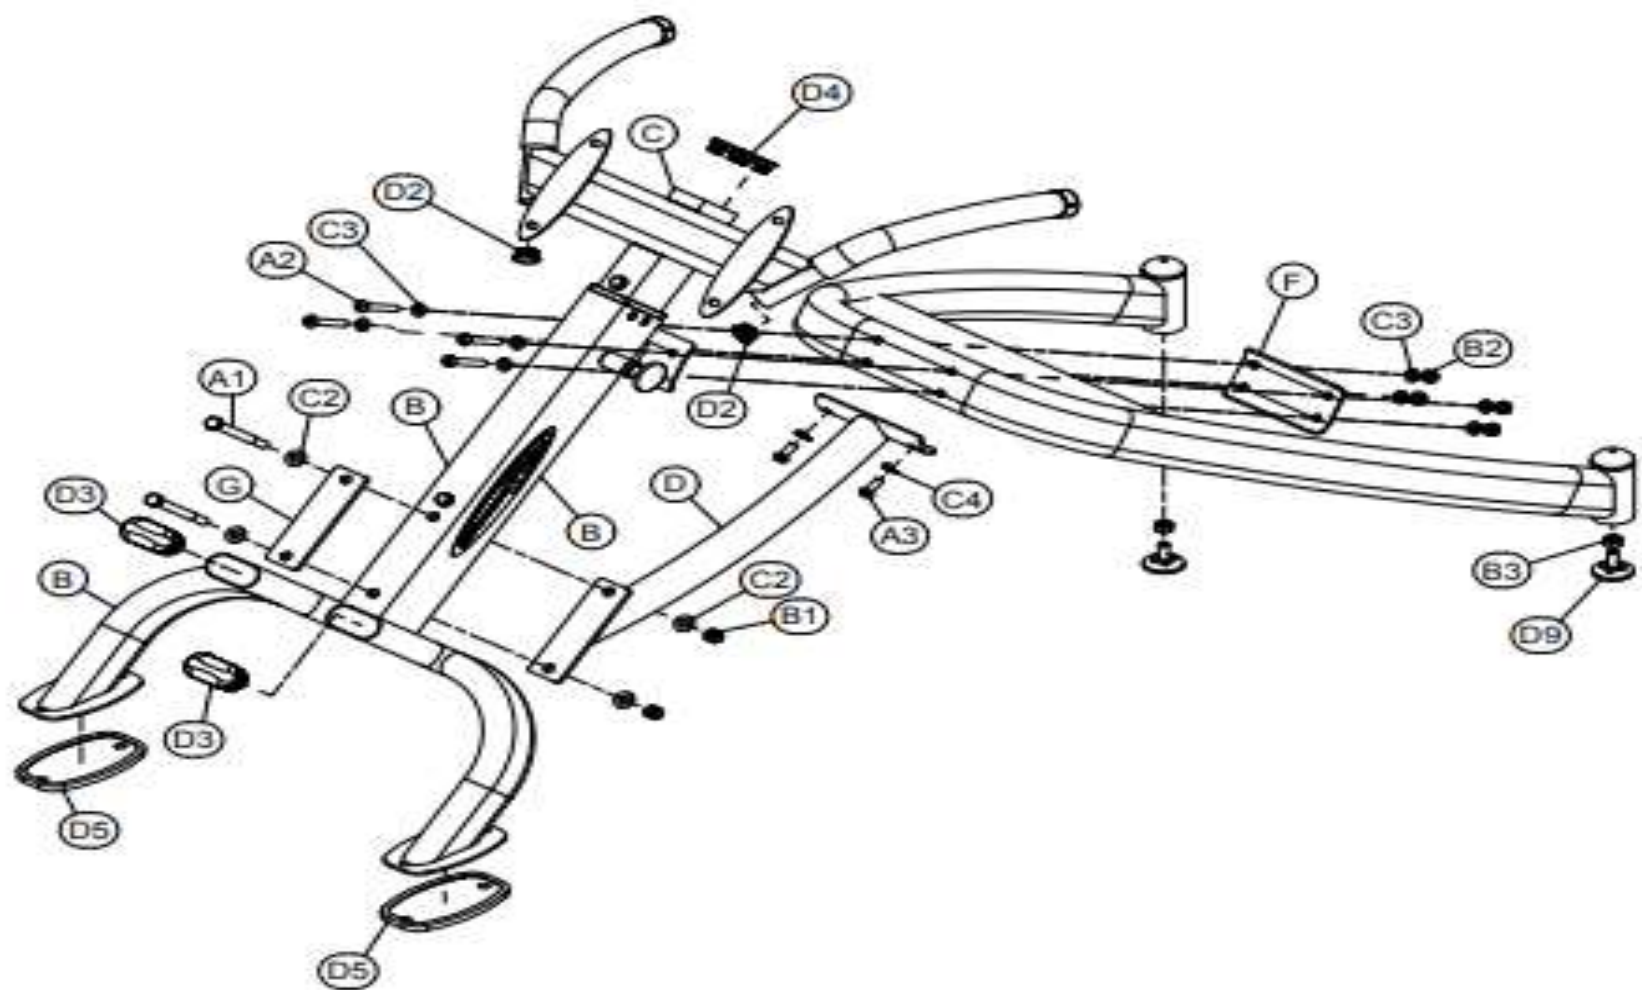

Above shows STEP 2
assembled and completed

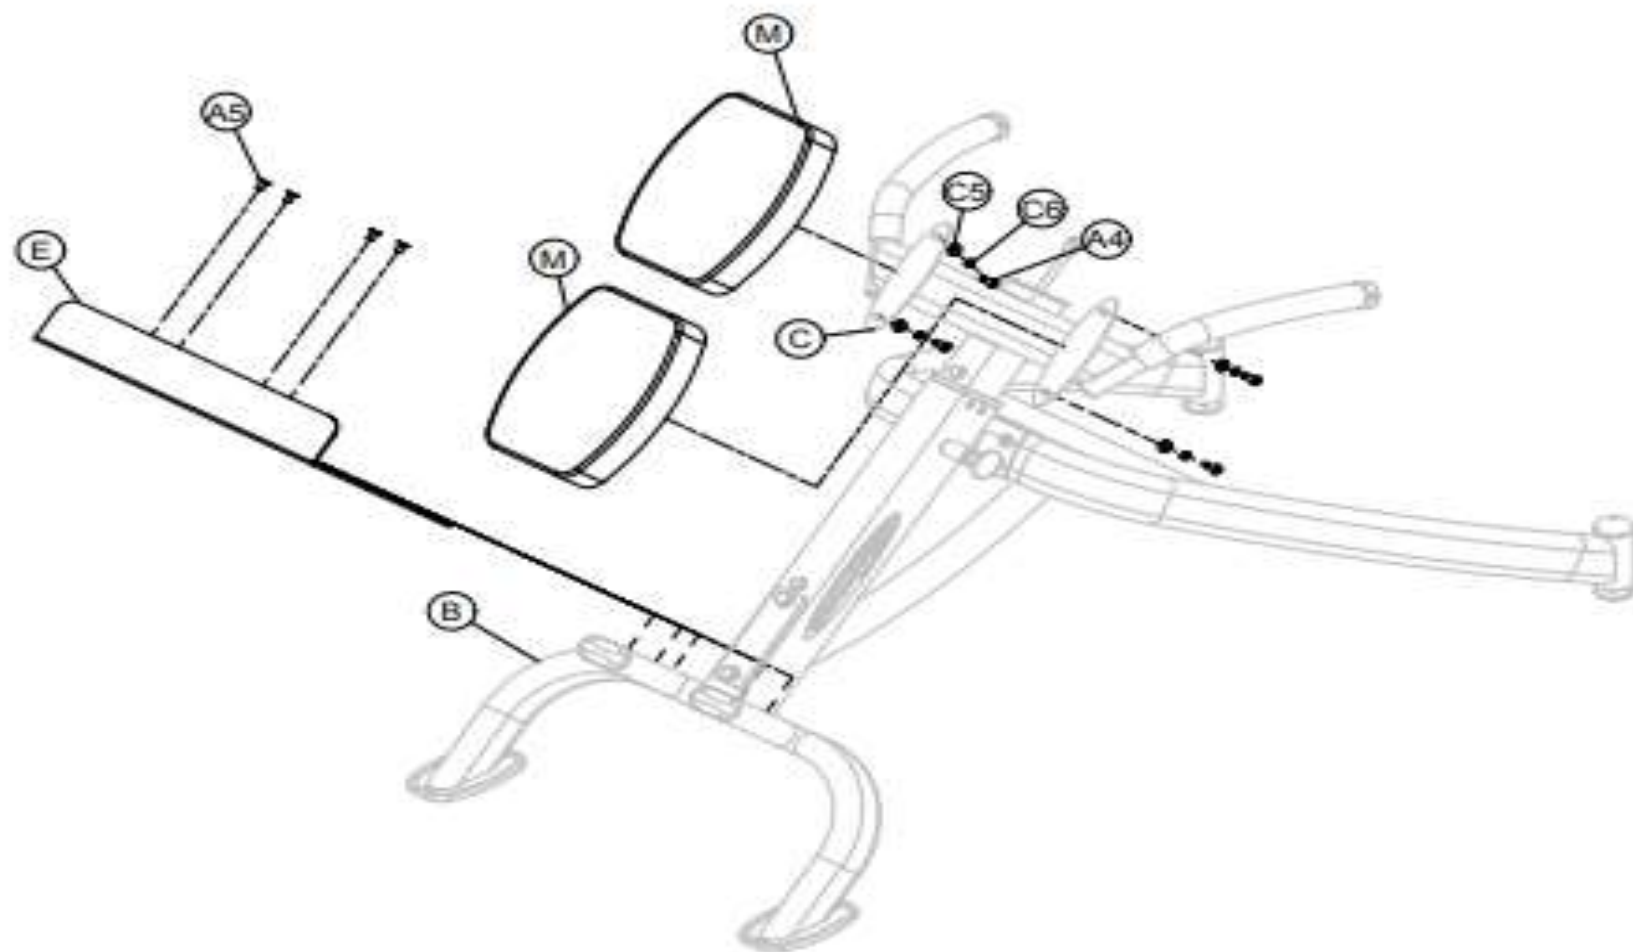

NBE.5

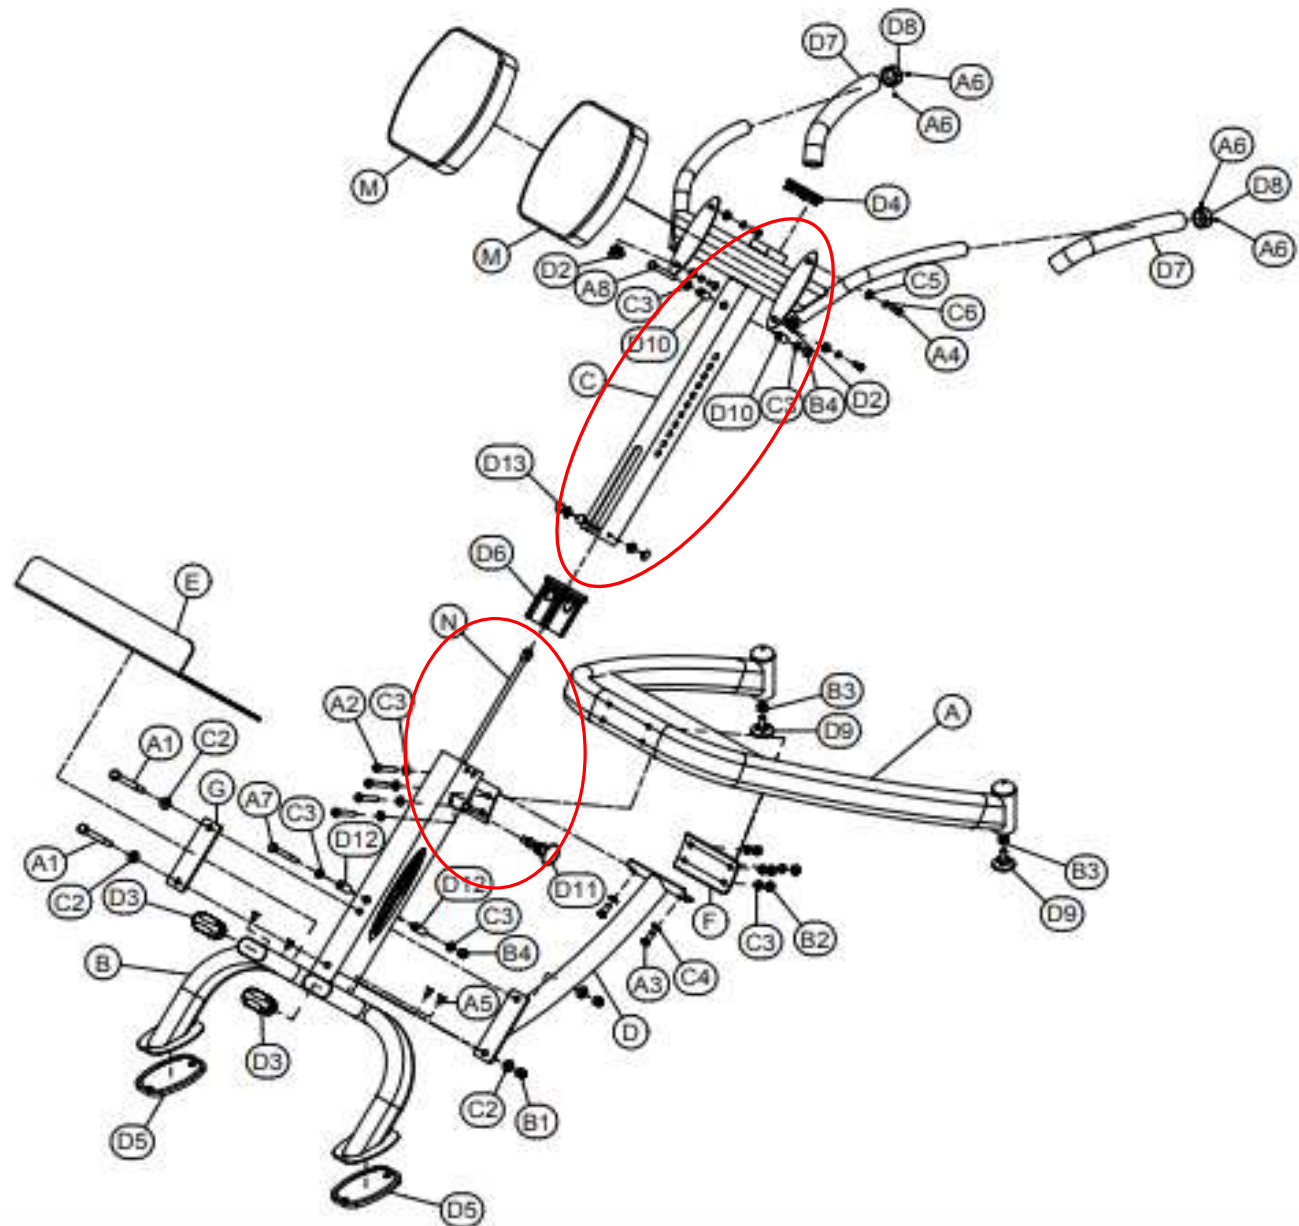

*Well done!

